


LONGSHORE SAFETY TIP


No. 2-03

NEW COASTWIDE GANTRY CRANE SIGNALS FIGURES 16.1 THRU 16.8

CONTAINER GANTRY CRANE HAND SIGNALS

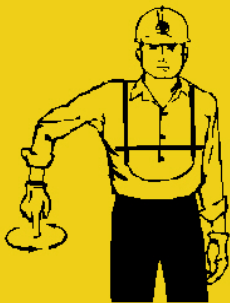

LOWER: WITH ARM EXTENDED DOWNWARD, FOREFINGER POINTING DOWN, MOVE HAND IN SMALL HORIZONTAL CIRCLES

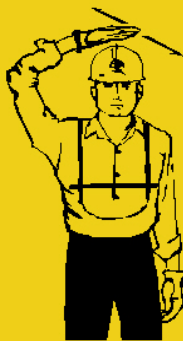

ALL CLEAR: ARM EXTENDED OVER HARD HAT, PALM DOWN, MOVE HAND IN A FORWARD TO BACKWARD MOTION, REPEAT 2-3 TIMES



UP EASY: WITH ARM VERTICAL, REPEATEDLY OPEN AND CLOSE FINGERS AND THUMBS, TOUCHING FINGER TIPS AND THUMB TIP WHEN CLOSED



HOIST: WITH ARM VERTICAL, FOREFINGER POINTING UP, MOVE HAND IN SMALL HORIZONTAL CIRCLES.



STOP: RIGHT ARM ACROSS CHEST THEN FULLY EXTENDED WITH PALM DOWN



DOWN EASY: WITH ARM EXTENDED DOWNWARD FOREFINGER POINTING DOWN, MOVE HAND IN SMALL SLOW CIRCLES. PLACE OPPOSITE HAND PALM UP MOTIONLESS UNDER HAND GIVING MOTION SIGNAL.



MOVE SPREADER/HOOK IN THE DIRECTION INDICATED.



GANTRY CRANE RIGHT/LEFT ROLL HANDS ONE OVER THE OTHER IN THE DESIRED DIRECTION OF TRAVEL

WS-003



Dedicated to Safety

Pacific Maritime Association

550 California Street , San Francisco, CA 94104

Phone: 415-576-3260 Fax: 415-989-1425

Email: mmacdonald@pmanet.org

New Rules

Now there are two sets of crane signal rules.
One for Non-Gantry Cranes and One for
Gantry Container Cranes.

The OLD Rules stayed in Rule 1422.

The NEW Rules are in Rule 1633.

Rule 820

Personnel required to give signals for winch and crane operations shall only use applicable hand signals as shown in Rule 1422 & 1633.

Rule 1422

Only the standard recognizable crane signals shown in Figures 14.1 through 14.7 shall be used for non-gantry crane operations.

Rule 1633

Only the standard recognizable crane signals shown in Figures 16.1 through 16.8 shall be used for gantry container crane operations.